


Technical data sheet

Project by Mad Designers 2012

MACROLUX

MACROLUX s.r.l. 31020 San Vendemiano Treviso - Italia Via Padania, 67/69 t. +39 0438 470773 f. +39 0438 470295 p. iva 03547130264 macrolux@macrolux.net www.macrolux.it

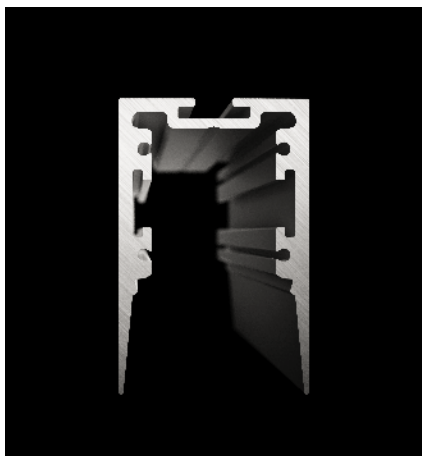

MX1_27

Technical description:

Modular system in extruded aluminum for ceiling or suspended installation. The satin polycarbonate diffuser is retracted by 1.5 cm from the ceiling to allow comfort lighting. The system is wired with 24V LED strips where the power supply is placed remotely and the polycarbonate covers the entire length of the profile, creating a continuous line of light.

Installation:

Ceiling and suspended mounted.

Dimension:

MX1_27

P = 30mm H = 45mm

Finishes:



94 white ultramatte



92 black ultramatte



98 anodized aluminium

MX1_27

IP
40



MX1_27

